Mitsubishi / Caterpillar N Catalog

S/N	Description	Part number	Pic ref
1	Scale metal	Cat P5000	
2	Transmission assy	91A24-38010	
3	Control valve assy	91A28-12010	
4	Engine bare Engine long block	K21 K25 10102-FU400 10102-FU500	
5	Inching cable	91A51-13200 FD20-25N (CF18C), FD30-35N (CF14E)	

6	**Friction plate**	**91324-02702**	
7	**Metal plate**	**91324-12601**	
8	**Torque convertor**	**91A23-10020**	
9	**Torque convertor**	**91A23-10050 FD20-30N**	
10	**Input plate**	**91A23-00300**	
11	**Transission overhaul Kit**	**91A24-00028**	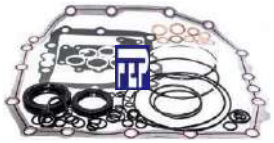
12	**GASKET, CONTROL VALVE BODY**	**91A28-42400**	
13	**GASKET, CONTROL VALVE COVER**	**91A28-11100**	
14	**Oil seal**	**91A24-08600**	

Para solicitar mayor información sobre los productos por favor llamar en Colombia a los cels : 3123885625 – 3106250421.

15	**Oil seal, torque convertor**	**91A24-07900**	
16	**Charging pump**	**91A24-10030**	
17	**Shift solenoid**	**91A28-20010**	
18	**Valve solenoid**	**93A28-01400**	
19	**Drive shaft**	**91324-00062**	
20	**U-joint**	**91524-04400**	
21	**TRANSMISSION STRAINER**	**91A24-08200**	
22	**TRANSMISSION STRAINER**	**91224-07101**	
23	**Clutch piston**	**91A24-11500**	

24	**Clutch-disk**	**91A21-10200 275*20t**	
25	**Flywheel**	**12310-50K00**	
26	**Ring gear**	**91H20-01130**	
27		**16A38-70080**	
28	**Meter panel**	**91C04-63011**	
29	**Fuse box**	**91A04-26011**	
30	**Fuse box**	**91A05-21012**	
31	**Transmission mount**	**91A10-10500**	

32	**Engine mount**	**91A20-10200**	
33	**Gas spring**	**91312-02900** **91212-13200**	
34	**Head cylinder assembly**	**11040-FY501**	
35	**Head cylinder assembly**	**K21 K25**	
36	**Cylinder head bolt** **Bulon Tapa de Cilindro**	**11056-FY500** **K15 K21 K25**	
37	**Engine gasket kit**	**10101-FY52K** **K15, K21, K25**	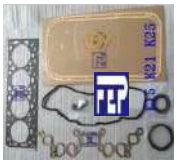
38	**Head gasket**	**K15 K21 K25** **Graphite**	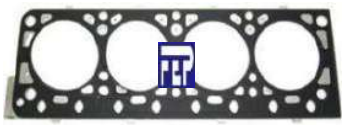
39	**Head gasket**	**K15 K21 K25 Metal**	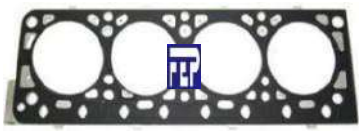
40	**Liner set**	**K21, K25**	
41	**Piston set**	**K25 STD**	

Para solicitar mayor información sobre los productos por favor llamar en Colombia a los cels : 3123885625 – 3106250421.

42	**Piston set**	**K25 +0.25 mm**	
43	**Piston set**	**K25 +0.50 mm**	
44	**Piston ring set**	**K25 STD**	
45	**Piston ring set**	**K25 +0.25 mm**	
46	**Piston ring set**	**K25 +0.50 mm**	
47	**Rocker arm assy**	**K15 K21 K25**	
48	**Push rod**	**13238-FU40A** **K15 K21 K25**	
49	**Valve lifter**	**K15 K21 K25**	
50	**Exhaust valve**	**13202-FU400**	
51	**Intake valve**	**13201-FY500** **K15 K21 K25**	
52	**Intake valve guide**	**13212-FY500**	

Para solicitar mayor información sobre los productos por favor llamar en Colombia a los cels : 3123885625 – 3106250421.

53	**Camshaft**	**13001-50K00 K15, K21, K25**	
54	**Crankshaft**	**K21**	
55	**Crankshaft**	**K25**	
56	**Crankshaft pulley**	**91H20-01010 K15, K21, K25**	
57	**Crankshaft rear seal**	**12279-FF200**	
58	**Crankshaft seal front**	**12279-FF200 K15 K21 K25**	
59	**Crankshaft bearing set**	**K15 K21 K25 STD**	
60	**Crankshaft bearing set**	**K15 K21 K25 +0.25mm**	
61	**Crankshaft bearing set**	**K15 K21 K25 +0.50mm**	

62	Connecting rod bearing set	K15 K21 K25 STD	
63	Connecting rod bearing set	K15 K21 K25 +0.25mm	
64	Connecting rod bearing set	K15 K21 K25 +0.50mm	
65	Connecting rod	12100-FU400 K15, K21	
66	Connecting rod	12100-FY500 K25	
67	Oil pan	K15 K21 K25 H15 H20-2 H25	
68	Distributor	22100-FU410 K15 K21 K25	
69	Distributor cap	K15 K21 K25 H15 H20-2 H25	
70	Distributor rotor	K15 K21 K25	

71	**Ignition cabl set**	**K15 K21 K25 H15 H20-2 H25**	
72	**Ignition cabl set**	**K15 K21 K25**	

73	**Air-duct hose**	**16267-FU400**	
74	**Delay valve**	**14958-H9810**	
75	**Governor**	**19100-FU400**	
76	**Carburetor**	**16010-50K00 K15 K21 K25 H15 H20-2 H25**	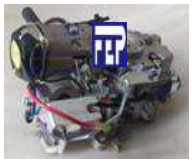
77	**Carburetor**	**16010-FU400**	
78	**Oil pump**	**K15 K21 K25 H15 H20-2 H25**	
79	**Oil pump**	**K15 K21 K25 H15 H20-2 H25**	

80	**Fuel pump**	**17010-50K00**	
81	**Fuel pump**	**17010-50K60**	
82	**Flywheel housing**	**12320-50K00**	
83	**Oil hose**	**91A01-11100**	

84	**Air filter housing**	**91E61-20100**	
85	**Air filter housing cap**		
86	**Air filter outer**	**91E61-00712**	
87	**Air filter inner**	**91E61-00600**	
88	**LPG filter**	**K21 K25**	

89	**Fuel filter**	**91H20-02350 K15 K21 K25 H20**	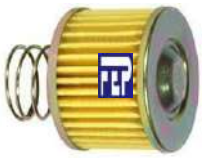
90	**Oil filter**	**15208-01B01**	
91	**Hydraulic filter return**	**91375-03800**	
92	**Hydraulic filter suction**	**91375-23600**	
93	**LPG kit**		
94	**LPG valve**	**91H20-04460**	

95	**LPG seal kit**	**90425-08490**	
96	**Starter**	**23300-FU410**	
97	**Alternator**	**23100-FU410**	

Para solicitar mayor información sobre los productos por favor llamar en Colombia a los cels : 3123885625 – 3106250421.

98	**Ignition switch**	**91A05-21400 FD20-25N(F18C), FD10-35N, FG1035N**	
99	**Ignition switch**	**91A07-11900**	
100	**F/R switch**	**91A05-03600**	
101	**Lamp switch**	**91A05-25030**	
102	**Lamp switch**	**91A05-03400 91A05-13400**	
103	**Blinker lever trq**	**P5000, F18C**	
104	**Combination switch assy**	**91A05-75010**	
105	**Timing gear kit**	**K21 K25**	
106	**Timing tensioner**	**13070-50K00**	

107	**Timing chain**	**13028-FU400**	
108	**Crankshaft gear**	**13021-FY500** **K15 K21 K25**	
109	**Camshaft gear**	**13024-FY500** **K15 K21 K25**	
110	**Fan blade**	**91H20-02670** **K21 K25**	
111	**Water pump**	**K21 K25**	
112	**Fan belt pulley**	**21051-FU410**	
113	**Temperature sensor**	**90425-02010**	
114	**Radiator**	**91E01-00010**	
115	**Radiator**	**91B01-00020**	
116	**Reservoir tank**	**91A01-10700** **FD10-35N,** **FG1535N** **DP25NT**	

Para solicitar mayor información sobre los productos por favor llamar en Colombia a los cels : 3123885625 – 3106250421.

117	**Radiator hose lower**	**91E01-10300**	
118	**Radiator hose upper**	**91E01-30200**	
119	**Hose**	**91E01-00500** **91E01-10500** **91E01-20500** **91E01-30500** **21503-FK300**	
120	**Hose**	**91E01-00400**	
121	**Thermostat cap**	**K15,K21,K25**	
122	**Thermostat**	**K21 , K25 , H20-2**	
123	**Gear**	**12353-FU400** **K15 K21 K25**	
124	**Gear**	**12351-FU400** **K15 K21 K25**	
125	**Bearing - sproket pto, driven**	**12354-50K00**	
126	**Hydraulic pump chain**	**91H20-01210**	

Para solicitar mayor información sobre los productos por favor llamar en Colombia a los cels : 3123885625 – 3106250421.

127	**Hydraulic pump**	**91E71-10200**	
128	**Hydraulic pump**	**91E71-00100**	
129	**Hydraulic pump**	**91K46-26100** **FD20-30N**	
130	**Propeller shaft assy**	**91571-20050**	
131	**POWER CYLINDER**	**91E43-15600** **91E43-05600**	
132	**Rear axle**	**91F43-00101** **91F43-01400**	
133	**Axle bushing**	**91E43-10900**	
134	**Axle bushing**	**05605-06050**	

135	**Pin, tie rod**	**91E43-00700 LH** **20*43**	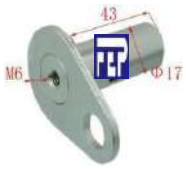
136	**Pin, tie rod**	**91B43-00700** **17*43**	
137	**Steering link**	**91E43-10600 RH** **91E43-10500 LH**	
138	**Pin, steering link**	**91A43-10700 RH** **91E43-11900 LH**	
139	**Bushing, steering axle**	**91E43-05500**	
140	**dust seal,steering link pin**	**91E43-01800**	
141	**SPHERICAL BEARING**	**91E43-05619**	
142	**Dust seal**	**91E43-11800**	
143	**Orbitrol**	**91B54-00400**	

144	**KING PIN**	**91E43-23200** **91E43-20400**	
145	**DUST SEAL**	**91E43-11300**	
146	**Needle bearing**	**91E43-05100**	
147	**Thrust bearing**	**91E43-00300**	
148	**SPHERICAL BEARING**	**91B43-05624**	
149	**Knuckle**	**91E43-10200 LH** **91E43-13300 RH**	

150	**Knuckle**	**91F43-00201 LH** **91F43-00301 RH**	
151	**Oil seal, steer axle**	**91A43-02300**	
152	**dust seal,steering link pin**	**91E43-01800**	

153	**KNUCKLE SHIM**	**91E43-05300**	
154	**Hub, rear axle**	**91E43-10800**	
155	**Hub cap**	**93443-00700**	
156	**Oil seal, rear axle hub**	**91E43-02300**	
157	**Wheel bolt**	**91243-10800 + 64343-19900**	
158	**Wheel bolt**	**91443-02700 + 91443-02800 FD35N (CF14E)**	
159	**Knuckle cap**	**91A43-03900**	
160	**TILT CYL.PIN**	**91A10-01600**	

161	**OIL SEAL, FRONT AXLE HUB**	**F3016-12523**	

162	**OIL SEAL, FRONT AXLE SHAFT**	**91E33-01800**	
163	**Pulley**	**94111-18800**	
164	**Pulley**	**P5000, F18C**	
165	**MAST BUSHING**	**94211-19600 125*140*39**	
166	**MAST BUSHING**	**94210-50300**	
167	**Mast roller**	**94211-11900 45*114*30**	
168	**Mast roller**	**94211-05300 45*116*30**	
169	**Mast roller**	**94211-05400 45*117*30**	
170	**Mast roller**	**94211-11800 45*115*30**	

171	**Power steering o/h kit**	**91E43-16110 FD30N (F14E)**	
172	**Lift cylinder o/h kit Center**	**94251-00068 FD20-25MC-F18B-, FD20-25N- F18CVFM/VFHM**	
173	**Tilt cylinder o/h kit**	**94204-00098**	
174	**Lift cylinder o/h kit Center**	**93051-00028**	
175	**Lift cylinder o/h kit**	**93051-00038**	
176	**Lift cylinder o/h kit**	**93051-01058**	
177	**Lift cylinder o/h kit**	**93051-10068**	

178	**Lift cylinder o/h kit**	**93051-10078**	
179	**Tilt cylinder o/h kit**	**94304-40140**	
180	**Lift cylinder o/h kit**	**94362-00048**	
181	**Side roller**	**94010-09601**	
182	**Chain sheave**	**9431002403/94310-09100**	
183	**Chain sheave**	**94211-06800**	
184	**Chain sheave**	**94211-00800**	
185	**Wear pad kit**	**Caterpillar 2-2.5t Cascade 55F**	

Para solicitar mayor información sobre los productos por favor llamar en Colombia a los cels : 3123885625 – 3106250421.

186	**Wear pad kit**	**Caterpillar 3t Cascade 65F**	
187	**Wear pad kit**	**93053-10038**	
188	**Mast tripe**	**94111-08600 FD10-30N, FD2030TA**	
189		**91A10-01600**	
190	**Accelerator cable**	**91E51-11200 91E51-01200 P5000 Mit. FD20～35N/S4S**	
191	**Accelerator cable**	**91A51-25400 91A51-35400 FG10-30N K21 K25**	
192	**Brake drum**	**91E33-20011 43204-FK010**	
193	**Brake drum**	**91E33-00801 2-2.5T FD20-25N**	

194	**Brake drum**	**91G33-10800 3T-3.5T 30N**	
195	**HUB BOLT Include Nut**	**91E33-00900**	
196	**HUB BOLT Include Nut**	**91G33-01100**	
197	**Accelerator pedal**	**91A51-28500**	
198	**SHIFT WIRE ASSY**	**91A51-04300**	
199	**SHIFT WIRE ASSY**	**91E51-00600**	
200	**Stop lamp switch**	**91206-11300**	

201	**CLUTCH MASTER CYLINDER**	**91A51-11100**	
202	**CLUTCH RELEASE CYLINDER**	**91A51-03500**	

203	**Master cylinder**	**91A46-10100**	
204	**Wheel cylinder**	**91E46-00112**	
205	**Brake shoe**	**91E46-00113** **91E46-00212** **91E46-00114**	
206	**Brake repair kit**		
207			
208	**Adjuster**	**91546-02300**	
209	**ADJUSTER**	**91E46-10213 RH** **91E46-10115 LH**	
210	**Return Spring,Brake Shoe**	**91446-03900**	
211	**Brake spring**	**91A51-10700**	

Para solicitar mayor información sobre los productos por favor llamar en Colombia a los cels : 3123885625 – 3106250421.

212	**Brake pedal pad**	**91A51-00600**	
213	**Brake cable**	**91E46-00119 LH** **91E46-00215 RH** **FG/FD20-35N**	
214	**Wheel rim**	**6.00*9**	
215	**Wheel rim**	**6.50*10**	
216	**Wheel rim**	**7.00*12**	
217	**Water temperature sender**	**05204-50300**	
218	**Oil presure switch**	**25240-89911**	
219	**Throttle Position Sensor**	**91A51-08400**	
220	**Crankshaft position sensor**	**91H20-01160**	

221	**Camshaft position sensor**	**91H20-21170**	
222	**Camshaft position sensor**	**91H20-31170**	
223	**Meter accelerator position sensor**	**97722-08400**	
224	**Speed sensor**	**91A05-11900**	
225	**Oxygen Sensor**	**91H20-06180**	
226	**Mirror**	**91404-11500**	
227	**Back alarm**	**Universal**	
228	**Horn**	**Universal 12V48V**	
229	**Horn**	**Universal 12V48V**	

Para solicitar mayor información sobre los productos por favor llamar en Colombia a los cels : 3123885625 – 3106250421.

230	LENS,FRONT COMBINATION LAMP	05153-18500	
231	HEAD LAMP ASSY	216G2-40601	
232	REAR COMBINATION LAMP	05153-09501	
233	Strobe lamp	12V-48V	
234	Strobe lamp	12V-110V	
235	Head lamp universal	27W Square	
236	Head lamp universal	27W Round	
237	Head lamp universal	48W	
238	LED line lamp, blue	155MM, 27W	

239	**LED line lamp, red**	**155MM, 27W**	
240	**U shape lamp**	**Red & Blue**	
241	**Spot lamp**	**12V-24V**	
242	**Spot lamp**	**12V-80V**	
243	**Arrow lamp**	**12V-80V**	
244	**Seat**	**91A14-02030**	
245	**Seat belt**	**A: with cable + orange colour B: without cable + orange colour**	
246	**Seat belt**	**A: with cable + black colour B: without cable + black colour**	

Si usted precisa mayor información sobre nuestros productos comuníquese al número del pie de página, nuestro representante resolverá todas sus inquietudes.